


Programming the PL3447P Remote

Program your remote to work with a vast range of A/V devices.

- (1) **The device you want to program should be ON.**
- (2) **On the chart in this manual, find the type of device you're programming and then find the brand name. Make a note of the three-digit code—you'll need it soon.**
- (3) **Press and hold the PRG key. It's recessed so it doesn't get pushed accidentally. When the indicator light beside the PRG button turns on, you can release the button.**
- (4) **Push the button with the name of the device you're programming (VCR, CABLE, TV).**
- (5) **Using the number pad, enter the three-digit code found on the chart in the reference section.**
- (6) **Press DISPLAY to save the code. The indicator light will flash three times and turn off if the code was accepted.**
- (7) **Aim the remote at the device and push the POWER button. It should turn off. If not, try the other codes listed and continue from step three.**
- (8) **After programming, to operate the device you have just programmed, press the proper mode button first.**

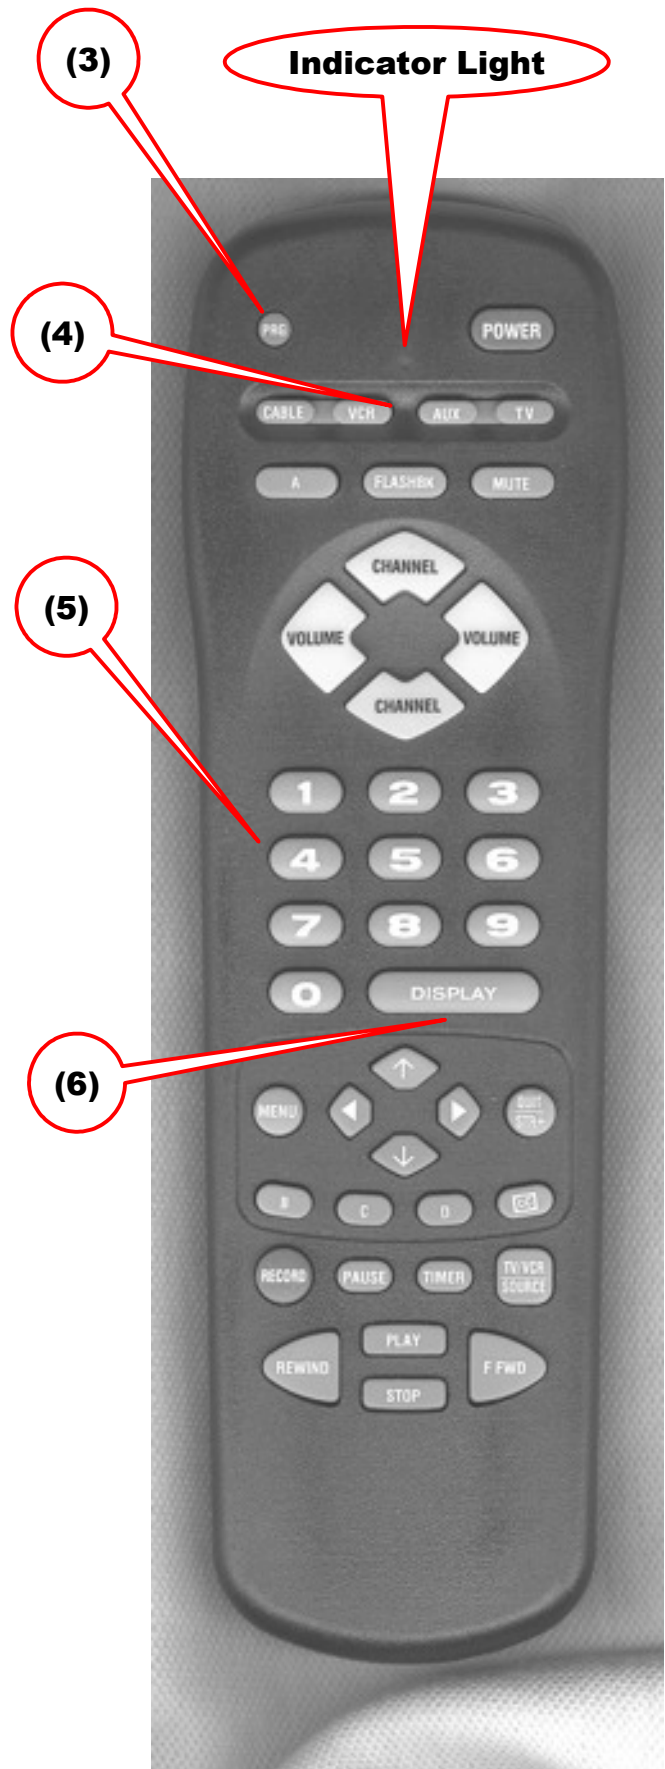

TV BRANDS

ADMIRAL..... 116, 121
 AKAI..... 104
 AMARC..... 103
 AOC..... 104
 BELL & HOWELL..... 121
 CENTURION..... 119
 CORONADO..... 103
 CURTIS MATHIS..... 116, 119, 121
 DAYTRON..... 119
 EMERSON..... 103, 104, 123,
 124, 131, 136
 FISHER..... 109, 118
 GE..... 106, 107, 114, 116,
 117
 GOLDSTAR..... 103, 104, 119
 HITACHI..... 102, 103, 129
 JVC..... 125, 132
 J.C.PENNEY..... 104, 110, 114,
 117, 119
 KMC..... 103
 KTV..... 103, 104
 LODGENET..... 121
 LOGIK..... 121
 LXI (SEARS)..... 133, 137
 MAGNAVOX..... 103, 112, 113,
 117, 119, 127, 128
 MAJESTIC..... 121
 MARANTZ..... 104, 120
 MEMOREX..... 121
 MGA/MITSUBISHI..... 104, 119,
 120, 130,
 NEC..... 104, 119
 PANASONIC..... 106, 107
 PHILCO..... 103, 104, 113,
 112, 113
 PHILIPS..... 113
 PIONEER..... 135
 PORTLAND..... 103
 QUASAR..... 106, 107
 REALISTIC..... 105, 123, 124
 RCA..... 104, 116, 126
 SAMPO..... 119
 SAMSUNG..... 103, 119, 134
 SANYO..... 108, 109, 118
 SCOTT..... 119
 SEARS..... 103, 108, 109,
 110, 111, 118, 134
 SHARP..... 103, 105, 122,
 133, 137
 SONY..... 115
 SYLVANIA..... 112, 113, 117,
 119, 127, 128
 TATUNG..... 106
 TEKNIKA..... 103, 112, 121,
 124
 TELERENT..... 103, 121
 TOSHIBA..... 110, 111, 134,
 WARDS..... 103, 104, 105,
 113, 114, 119, 121, 130
 YORX..... 119
 ZENITH..... 101

VCR BRANDS

AKAI..... 223
 AUDIO DYNAMICS..... 202, 218
 BROKSONIC..... 221
 CANON..... 214
 CITIZEN..... 209
 CRAIG..... 212
 CURTIS MATHIS..... 214, 216
 DBX..... 202, 218
 EMERSON..... 203, 221, 223,
 226, 233, 235
 FISHER..... 211, 212, 213
 FUNAI..... 231
 GE..... 214, 216, 220
 GOLDSTAR..... 209
 HITACHI..... 215
 INSTANT REPLAY..... 214, 227
 JVC..... 202, 225
 J.C.PENNEY..... 214, 215, 218,
 227
 KENWOOD..... 202
 MAGNAVOX..... 207, 214
 MARANTZ..... 207, 218
 MARTA..... 209
 MEMOREX..... 206, 212, 214,
 231
 MGA/MITSUBISHI..... 204, 222
 NEC..... 207, 218
 PANASONIC..... 214
 PENTAX..... 215
 PHILCO..... 214
 PHILIPS..... 214, 227
 PIONEER..... 210, 215
 PIONEER LASER DISK... 228
 QUASAR..... 214
 RCA..... 215, 216, 220, 227
 REALISTIC..... 206, 208, 212,
 214, 231
 SAMSUNG..... 220, 230
 SANYO..... 206, 212
 SCOTT..... 204, 205, 235
 SEARS / LXI..... 206, 209, 211,
 212, 215
 SHARP..... 208
 SHINTOM.....
 SONY VHS..... 232
 SONY VIDEO 8..... 217
 SYLVANIA..... 207, 214, 227
 SYMPHONIC..... 231
 TASHIKO..... 209
 TATUNG..... 202
 TEAC..... 202, 231
 TEKNIKA..... 234
 TOSHIBA..... 205, 215
 VECTOR RESEARCH..... 204, 218
 WARDS..... 208, 214, 219
 YAMAHA..... 202, 218
 ZENITH VHS 201, 210, 224,
 225
 ZENITH VCRS 84-88... 229

CABLE TV BOXES

GEMINI..... 305, 331
 GENERAL INSTRUMENT... 305, 306
 HAMLIN..... 302, 303
 JERROLD..... 304, 307, 308,
 309, 310
 KALE VISION..... 335
 MACOM..... 314, 321
 MACOM SATELLITE..... 322
 MAGNAVOX..... 334
 NSC..... 335
 OAK..... 311, 332
 PANASONIC..... 313, 320
 PARAGON (ZENITH)..... 333
 PIONEER..... 315
 REGENCY..... 329
 SAMSUNG..... 335
 SCIENTIFIC ATLANTA... 316, 323,
 326
 SPRUCER..... 313
 STANDARD COMPONENTS.. 335
 STS SATELLITE..... 324
 TELECAPTION 4000..... 325
 TOCOM..... 317
 TOCOM VIP..... 318
 TOSHIBA..... 322
 TOSHIBA SATELLITE.... 319
 ZENITH..... 301, 322
 ZENITH AV3000..... 327
 ZENITH-DRAKE SAT..... 312, 330
 ZENITH SATELLITE..... 328
 ZENITH LASER DISK.... 326

Zenith universal remote
 control codes

124-212-43

This document provided
 courtesy of:
www.newremotcontrol.com
 Unauthorized duplication
 prohibited.